## QUICK START GUIDE

## PIR



Power on the PIR with the ON/OFF switch.

Plug in the 3.55mm jack cord provided into the socket on the side.

Turn the transmitter on and plug the other side of the cord into the transmitter.

Mount the PIR, after 30 seconds, test it by moving past it and seeing a **red** flash/alarm trigger.

If necessary, adjust the sensitivity using the potentiometer by turning the dial left to decrease sensitivity or turn it right to increase sensitivity.

POWERED BY: (((CareTech.

helpdesk@rtmcloud.com.au 1300 997 248 | rtmcloud.com.au

